

STATUS	ZONES	CONTROLS																																								
<input type="checkbox"/> FIRE <input type="checkbox"/> FAULT <input type="checkbox"/> DISABLED <input type="checkbox"/> TEST <input type="checkbox"/> SUPPLY <input type="checkbox"/> SYSTEM FAULT	<table border="1"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td> </tr> <tr> <td colspan="4">1</td><td colspan="4">5</td> </tr> <tr> <td colspan="4">2</td><td colspan="4">6</td> </tr> <tr> <td colspan="4">3</td><td colspan="4">7</td> </tr> <tr> <td colspan="4">4</td><td colspan="4">8</td> </tr> </table>	1	2	3	4	5	6	7	8	1				5				2				6				3				7				4				8				<input type="checkbox"/> BUZZER SILENCE <b>1</b> <input type="checkbox"/> RESET <b>2</b> <input type="checkbox"/> LAMP TEST <b>3</b> <input type="checkbox"/> SOUNDERS ACTIVATE/SILENCE <b>4</b>
1	2	3	4	5	6	7	8																																			
1				5																																						
2				6																																						
3				7																																						
4				8																																						
FAULTS	INSTRUCTIONS FOR CONVENTIONAL FIRE ALARM PANEL																																									
<input type="checkbox"/> SUPPLY FAULT <input type="checkbox"/> BATTERY FAULT <input type="checkbox"/> AUX. SUPPLY FAULT <input type="checkbox"/> EARTH FAULT	<p><b>General User (Access Level 1)</b> To silence internal buzzer press BUZZER SILENCE. To override active delays, during an alarm condition, press DELAYS ACTIVE.</p> <p><b>Authorized User (Access Level 2)</b> To enter this level enter 4 digit code. Consult Manual for more details.</p> <p><b>EVACUATION</b> Enter Authorized User Code (Access Level 2). Press SOUNDER (Activate/Silence). Repeat last step to SILENCE sounders.</p>	<p><b>Fire Events</b> Internal Buzzer sounds. System Status Fire LED is lit. Zones on Fire will have their respective Fire LED lit. To silence fire alarms: First enter authorized user code (Access Level 2). Press SOUNDER (Activate/Silence) button.</p> <p><b>Fault Events</b> Internal Buzzer Sounds. System Status Fault LED is lit. Each fault will be shown by its own LED being lit. Call service engineer.</p>																																								
	DISABLEMENTS	<input type="checkbox"/> OUTPUTS AUXILIARY <input type="checkbox"/> DISABLE SOUNDERS <input type="checkbox"/> SELECTED ZONES <input type="checkbox"/> DELAYS ACTIVE																																								

CE  
 MANUFACTURED IN THE E.U. TO THE REQUIREMENTS OF EN54 Pt 2 & Pt 4 1998